

GE Energy Connections

Models 450, F & FF

Voltage Transformers

Application

60 Hz.

Standard Secondary Voltage

120 Volts.

Insulation Level

600 Volt, 10 kV BIL full wave.

Accuracy Class:

0.3 W, X, M & Y, 1.2Z

Those marked ** are 0.3 W, 0.6 X, M & Y

Thermal Rating:

750 VA at 30 °C. amb., 500 VA at 55 °C. amb.

The primary and secondary terminals are No. 10-32 screws into 3/8" deep brass inserts and fitted with one lockwasher and flatwasher and are contained in a sealable terminal cover.

Approximate weight 25 lbs.



No Fuse

REGULATORY AGENCY APPROVALS



Manufactured to meet the requirements of ANSI/IEEE C57.13. Classified by U.L. in accordance with IEC 44-1



1 Fuse



2 Fuses



Clear Plastic Cover



Model 450, F & FF

Not fused	Catalog Number		Voltage Rating	Turns Rating	Rec. Primary Fuse rating
	Primary Fuses Only	Primary and Secondary Fuses			
**450-069	450-069F	450-069FF	69.3:120	0.58:1	15.0
**450-120	450-120F	450-120FF	120:120	1:1	10.0
450-208	450-208F	450-208FF	208:120	1.73:1	8.0
450-240	450-240F	450-240FF	240:120	2:1	8.0
450-277	450-277F	450-277FF	277:120	2.31:1	8.0
450-288	450-288F	450-288FF	288:120	2.4:1	6.0
450-300	450-300F	450-300FF	300:120	2.5:1	6.0
450-346	450-346F	450-346FF	346:120	2.88:1	5.0
*450-480	*450-480F	*450-480FF	*480:120	4:1	4.0
*450-600	*450-600F	*450-600FF	*600:120	5:1	3.0



Models 450F & 450FF

- The core and coil assembly is encased in a thermoplastic shell and filled with resin.
- These transformers are designed for operation line-to-line. They may also be operated line-to-ground or line-to-neutral at reduced voltage voltage, (58 % of rated volts).
- It is desirable to use a 8.0 amp BBS type or equal fuse in the secondary to protect the transformer.
- With two exceptions these transformer are ANSI C57.13 group 1. Those marked * are group 2.
- Models designed specifically for 50Hz operation are available with reduced performance. Consult factory for details.
- Fuse blocks containing type KTK-R (class CC) fuses can be fitted.
- When primary fuses are requested, the rating will be as given in the table.
- This page contains a circle diagram for the estimation of the errors for other than rated burdens. See page 27 in this section for a description of its use.
- When only one fuse is used, it must be be connected into the line side (H1) terminal wiring. This will prevent the presence of voltage at the H1 terminal

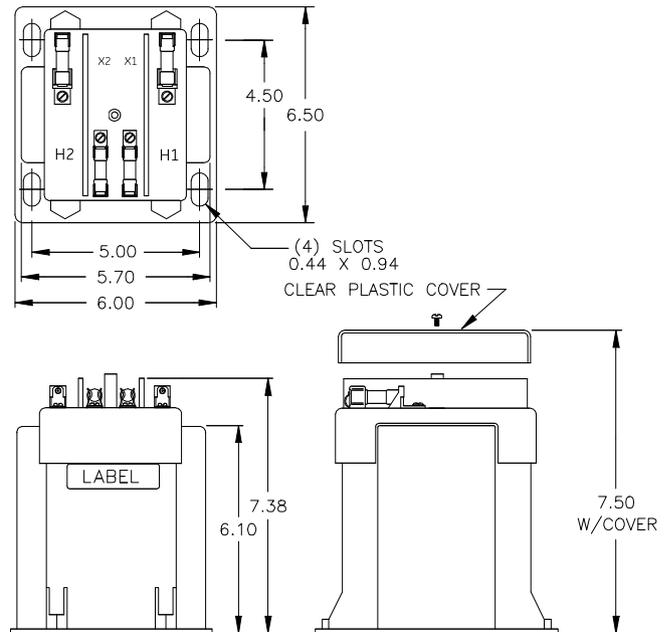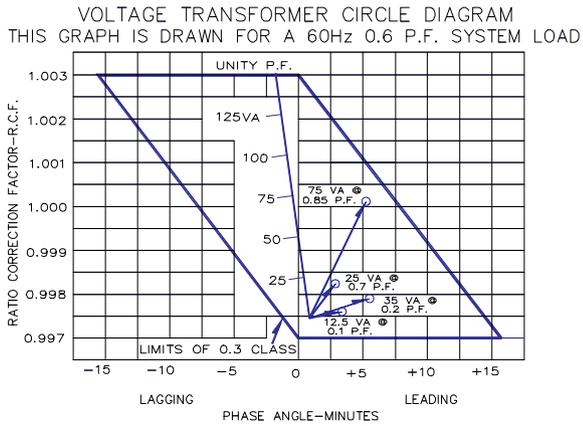

GEGridSolutions.com

Grid-AIS-L4-ITL_Model_450-1413-2017_05-EN. General Electric Company and Instrument Transformers LLC reserve the right to change specifications of described products at any time without notice and without obligation to notify any person of such changes.

Worldwide Contact Center

Web: www.GEGridSolutions.com/contact

Phone: +44 (0) 1785 250 070

USA and Canada: +1 (0) 800 547 8629

Europe, Middle East and Africa: +34 (0) 94 485 88 00

